

ALCTC 05A


Install - Cover Page



Cover Page	I
Unpacking	I-0
Utilities Location	I-1
Utility Access	I-2
Toe Kicks	I-3
Achorbolt Layout Full Scale	I-3t
Rear Base Cabinet	I-4
Lower Support Structure	I-5
Upper Bi-Fold Cabinet	I-6
Upper Support Structure	I-7
Front Sink Base	I-9
Countertop & Hardware	I-10
Upper Mid Cabinet	I-11
Upper Front Cabinet	I-12
Final Assembly	I-15

ALCTC 05A

Install - Unpacking

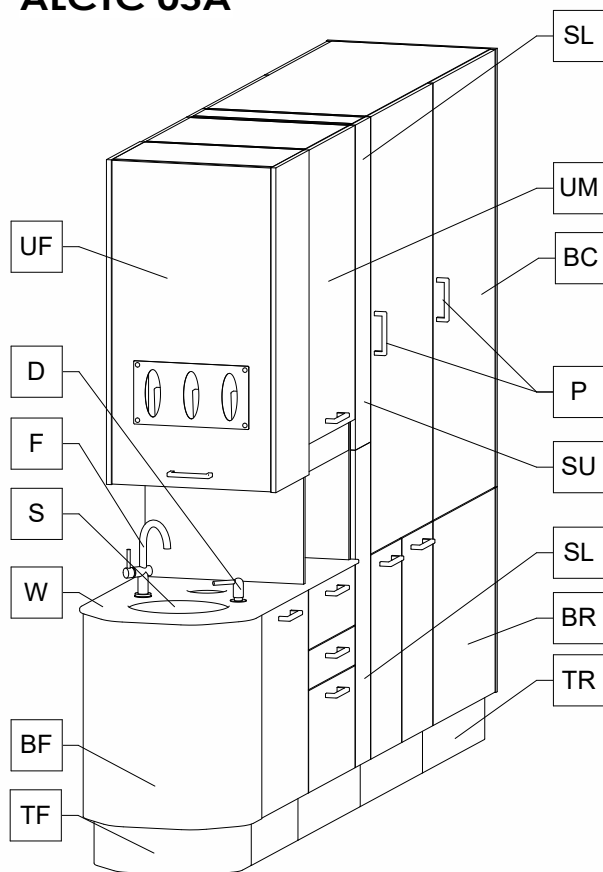


Packing List


Mark	Description	Qty
Cabinet		
TF	Front Toe Kick	1
TR	Rear Toe Kick	1
Cabinetry		
BC	Bi-Fold Cabinet	1
BF	Base Front Cabinet	1
BR	Base Rear Cabinet	1
SL	Lower Support Structure	1
SU	Upper Support Structure	1
UF	Upper Cabinet	1
UM	Upper Mid Cabinet	1
W	Work Surface	1
Hardware		
	#10-24 X 1 1/2" Self Drilling Screw	30
	Sex/Sleeve Bolt	18
F	Faucet	1
P	Door/Drawer Pull	19
STS	Self Tapping Screw	8
TA	Wedge Anchor Bolts	16
Other		
A	Tube of Caulk	1
B	Strainer	1
D	Soap Dispenser	1
S	Sink	1

Skid A contains: Both Front & Rear Base Cabinets, Toe Kick Package Assemblies, Solid Surface Top Package

Skid B contains: Front Section w/ Dispenser Upper Cabinet, Pass Through Bi-Fold Cabinet, Center Structural Support Package


1. Remove all packing material.
2. REMOVE HARDWARE PACK FROM SINK BASE ON **SKID A**.

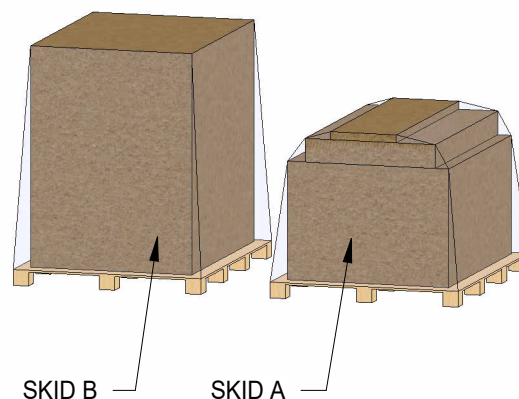

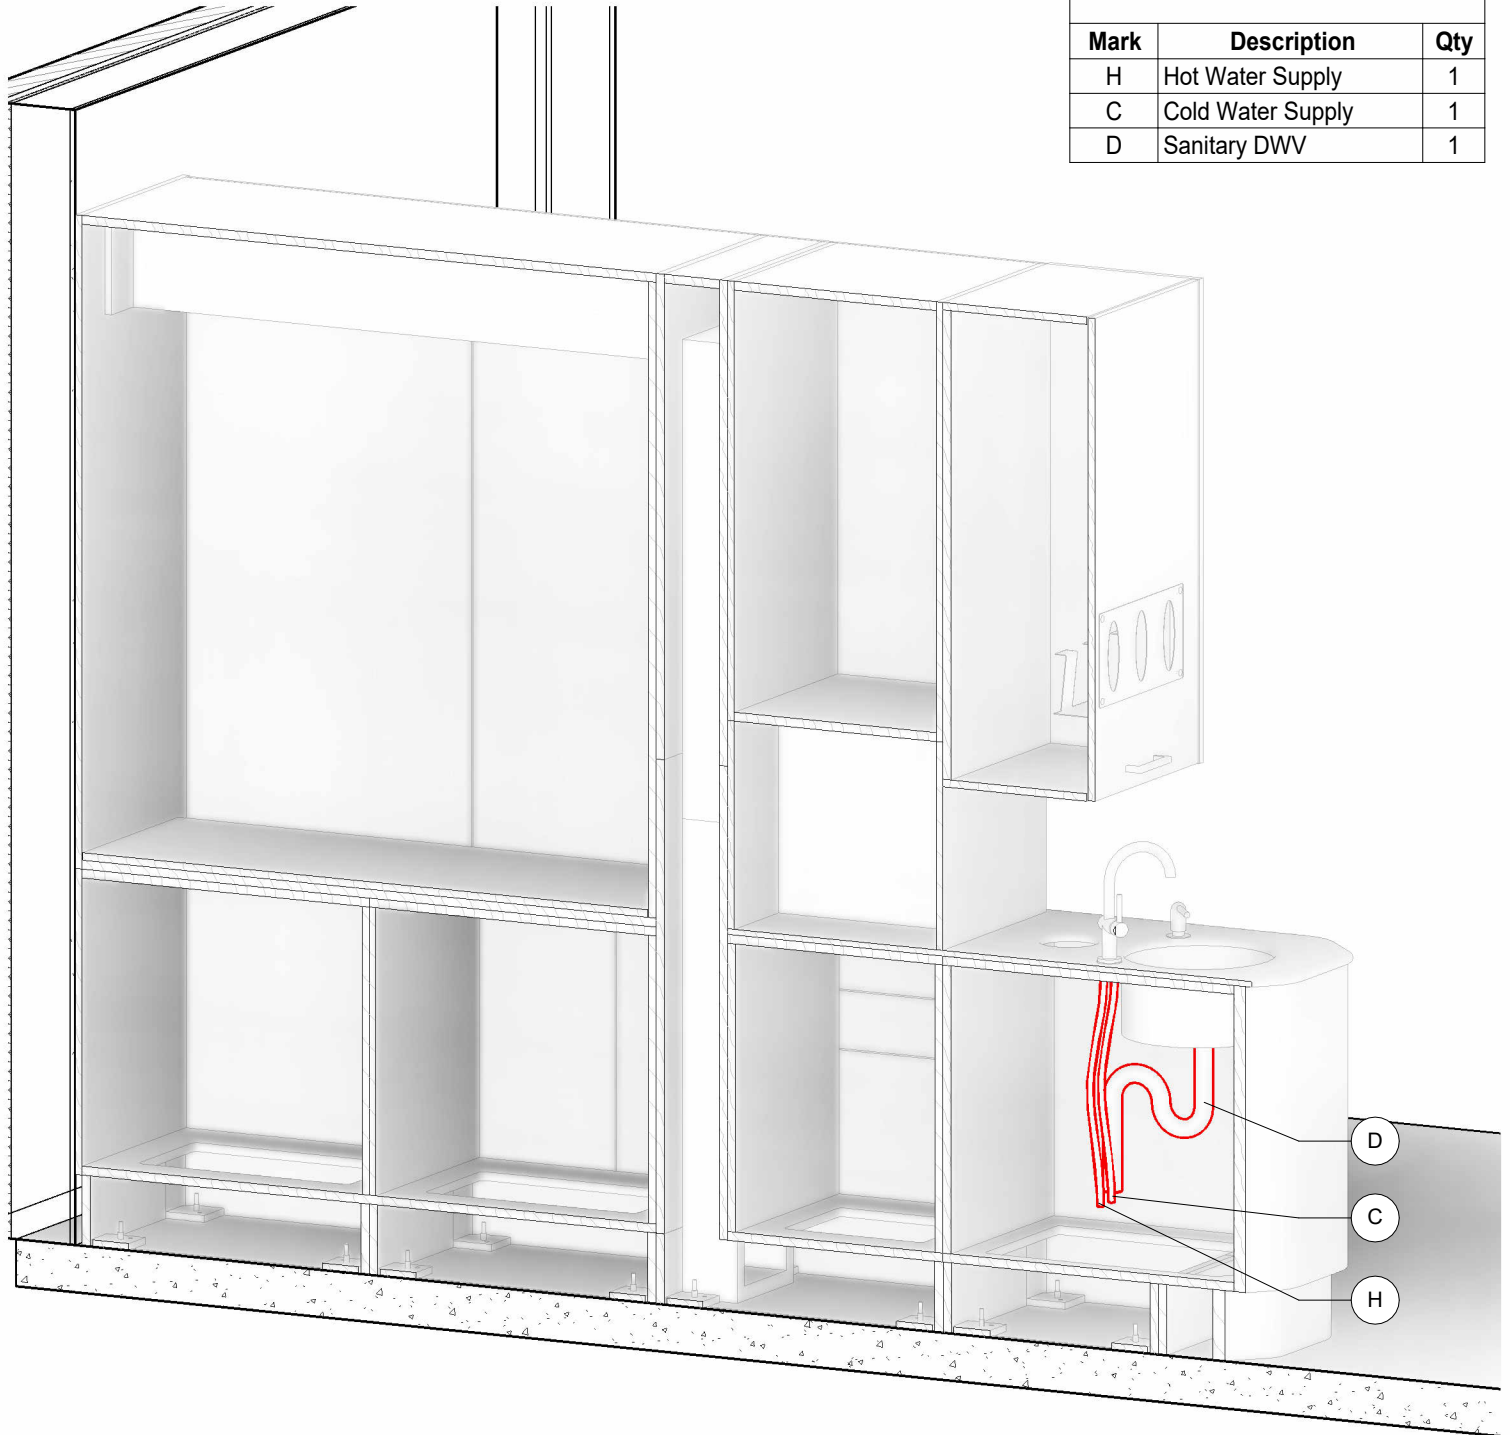

Plumbing Utilities -by others-

Mark	Description	Qty
H	Hot Water Supply	1
C	Cold Water Supply	1
D	Sanitary DWV	1

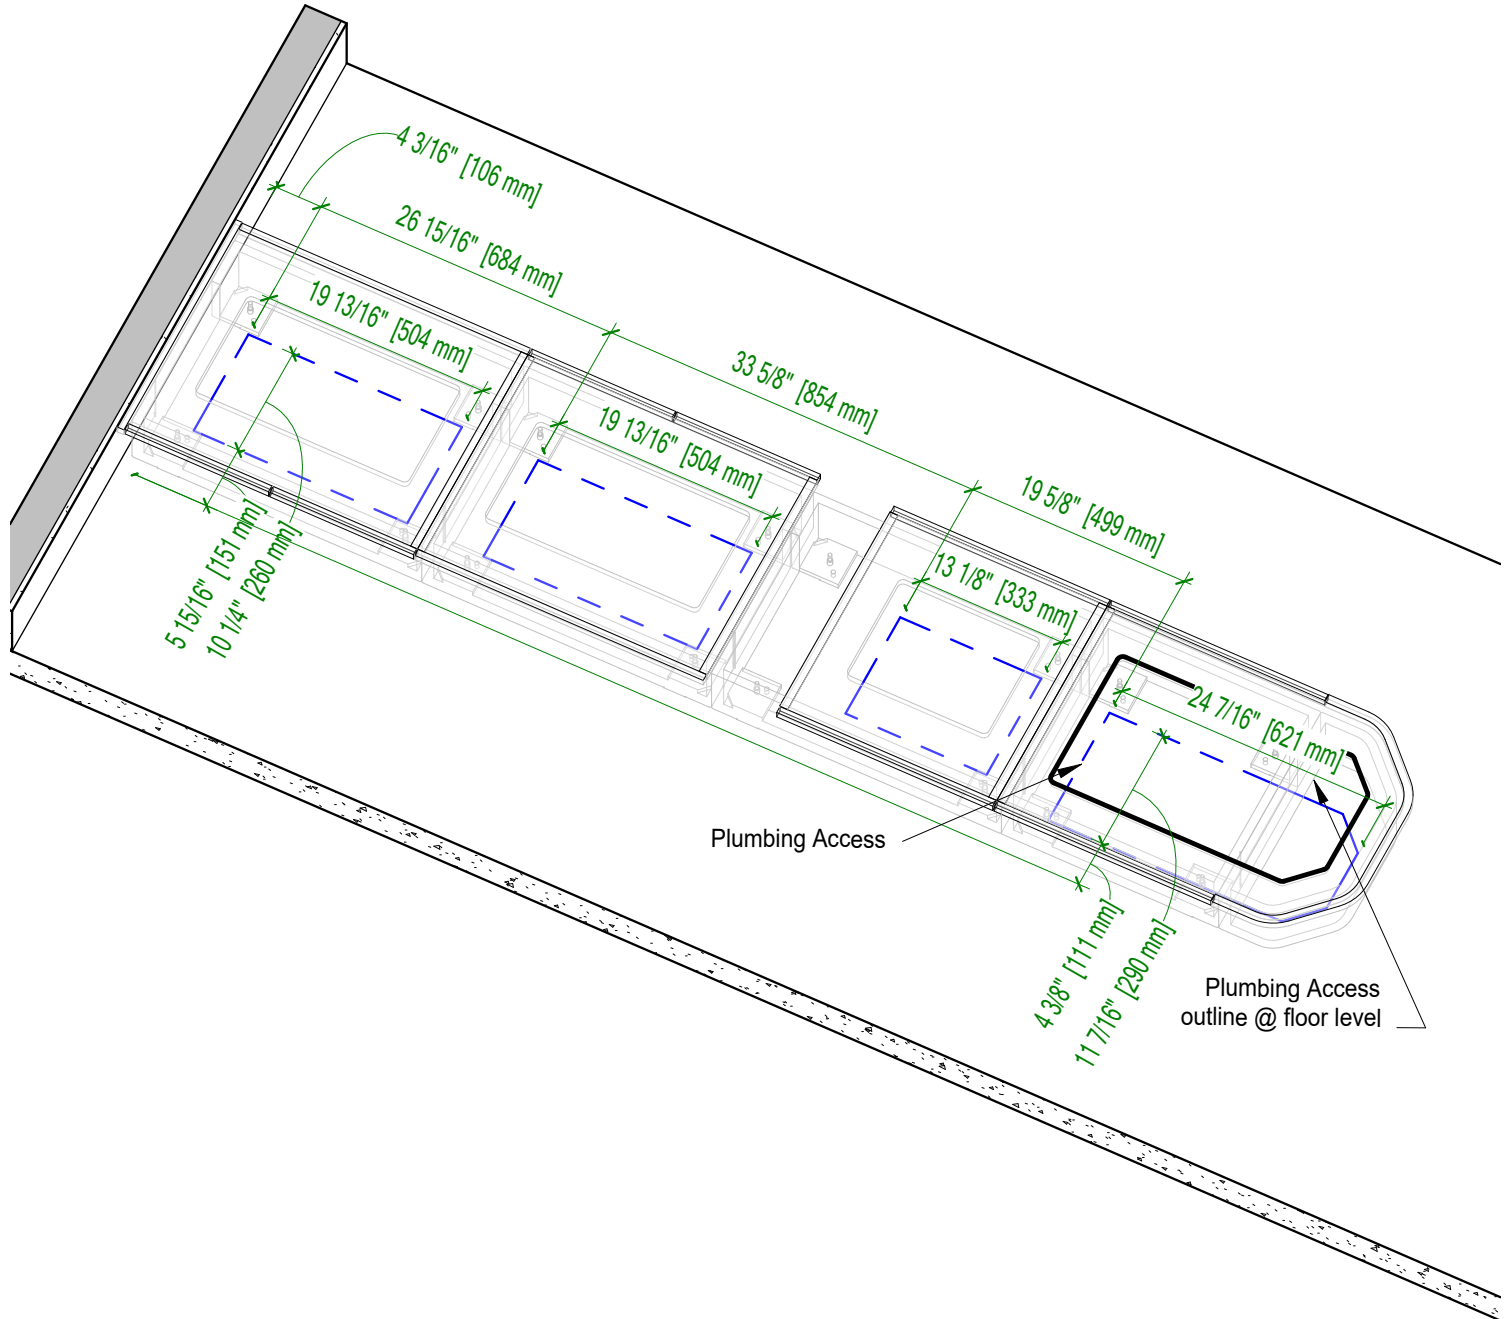


INSTALL TOE KICK ASSEMBLIES

1. Using Template **Drawing I-3t**, Drill anchor bolt holes (3/8" dia x 2" min) into floor as the designated locations (shown in BLUE).

Note: Toe kick leveling glides can be adjusted (top-down access) with flat head or 7/32 socket. ALL LEVELING GLIDES ARE PRE-INSTALLED ON TOE KICKS

2. Place anchors through toe kick into drilled holes for all toe kick sections. **[Detail A]**

Note: Do not secure anchors to allow movement until final assembly/leveling is completed

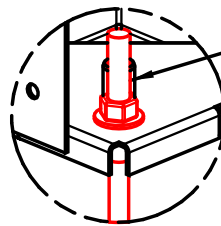


50901314
BOLT, WEDGE ANCHOR 3/8" X 5-1/2"

A


TR Rear Toe Kick

TF Front Toe Kick

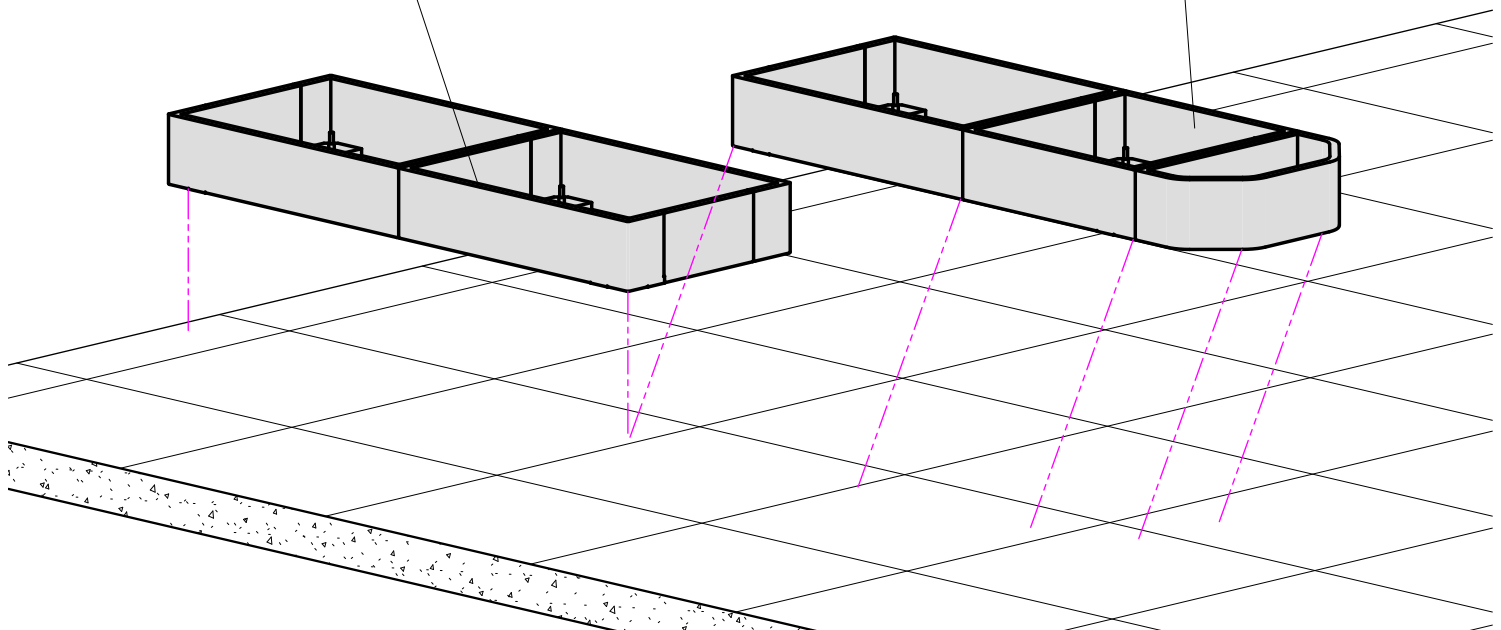

INSTALL REAR BASE CABINET

1. REMOVE ALL DOORS & DRAWERS.
DOORS/DRAWERS ARE MATCHING/COORDINATED SETS. KEEP TRACK OF WHERE EACH WAS REMOVED. DOORS & DRAWERS MUST BE REINSTALLED IN SAME CONFIGURATION AT END OF ASSEMBLY.
2. PLACE REAR BASE CABINET ON TOE KICK AS SHOWN AND ATTACH WITH #10-24 X 1 1/2" SELF DRILLING SCREWS. [DETAIL CTK]


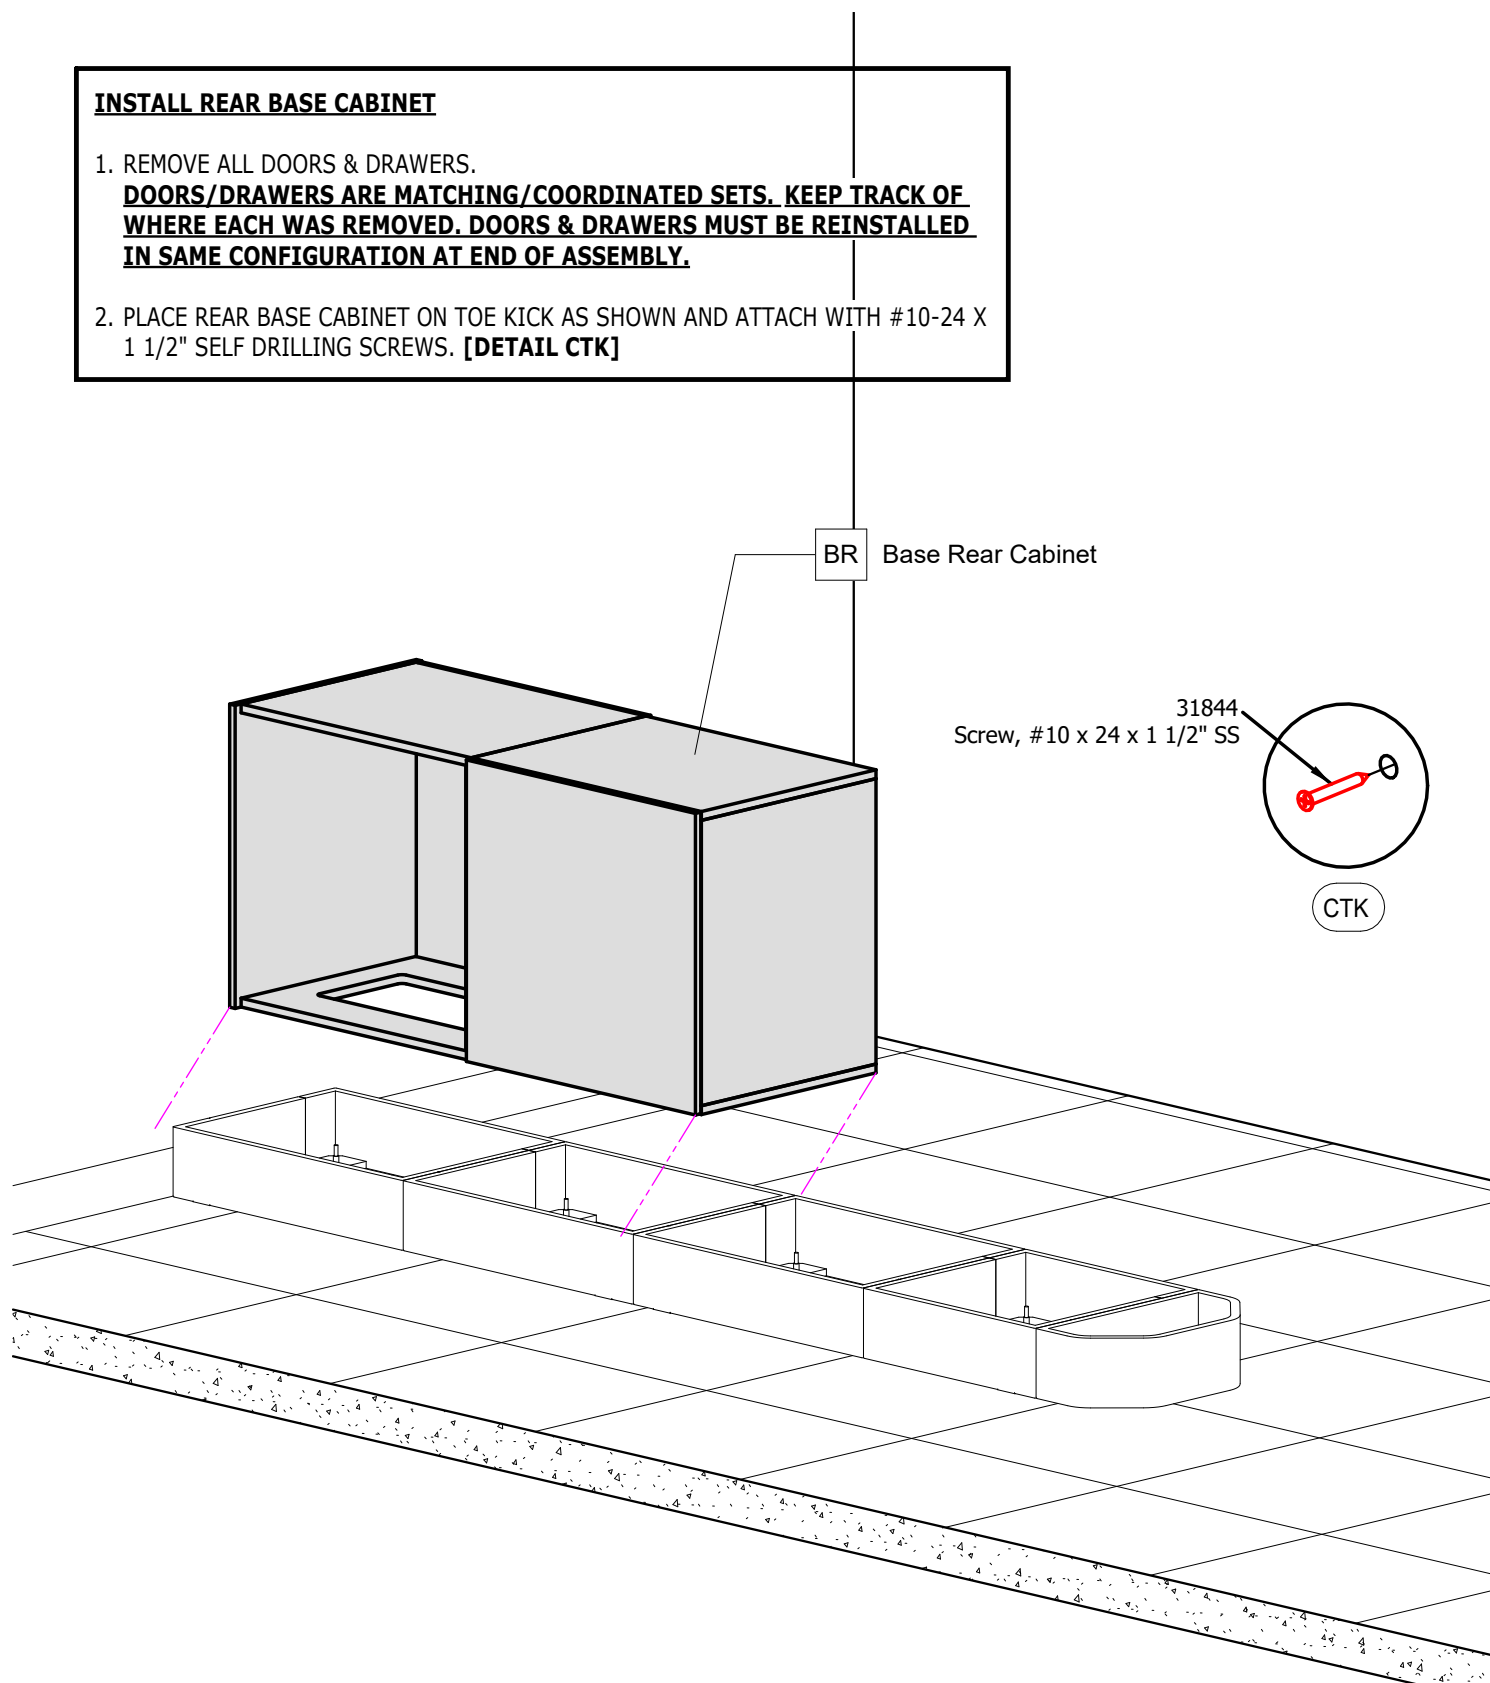


ALCTC 05A

Install - Lower Support Structure

INSTALL LOWER SUPPORT STRUCTURE

1. Place lower center support structure.
2. Remove panels and attach to rear base cabinet with sex/sleeve bolt set (4) [**DETAIL SSB**]

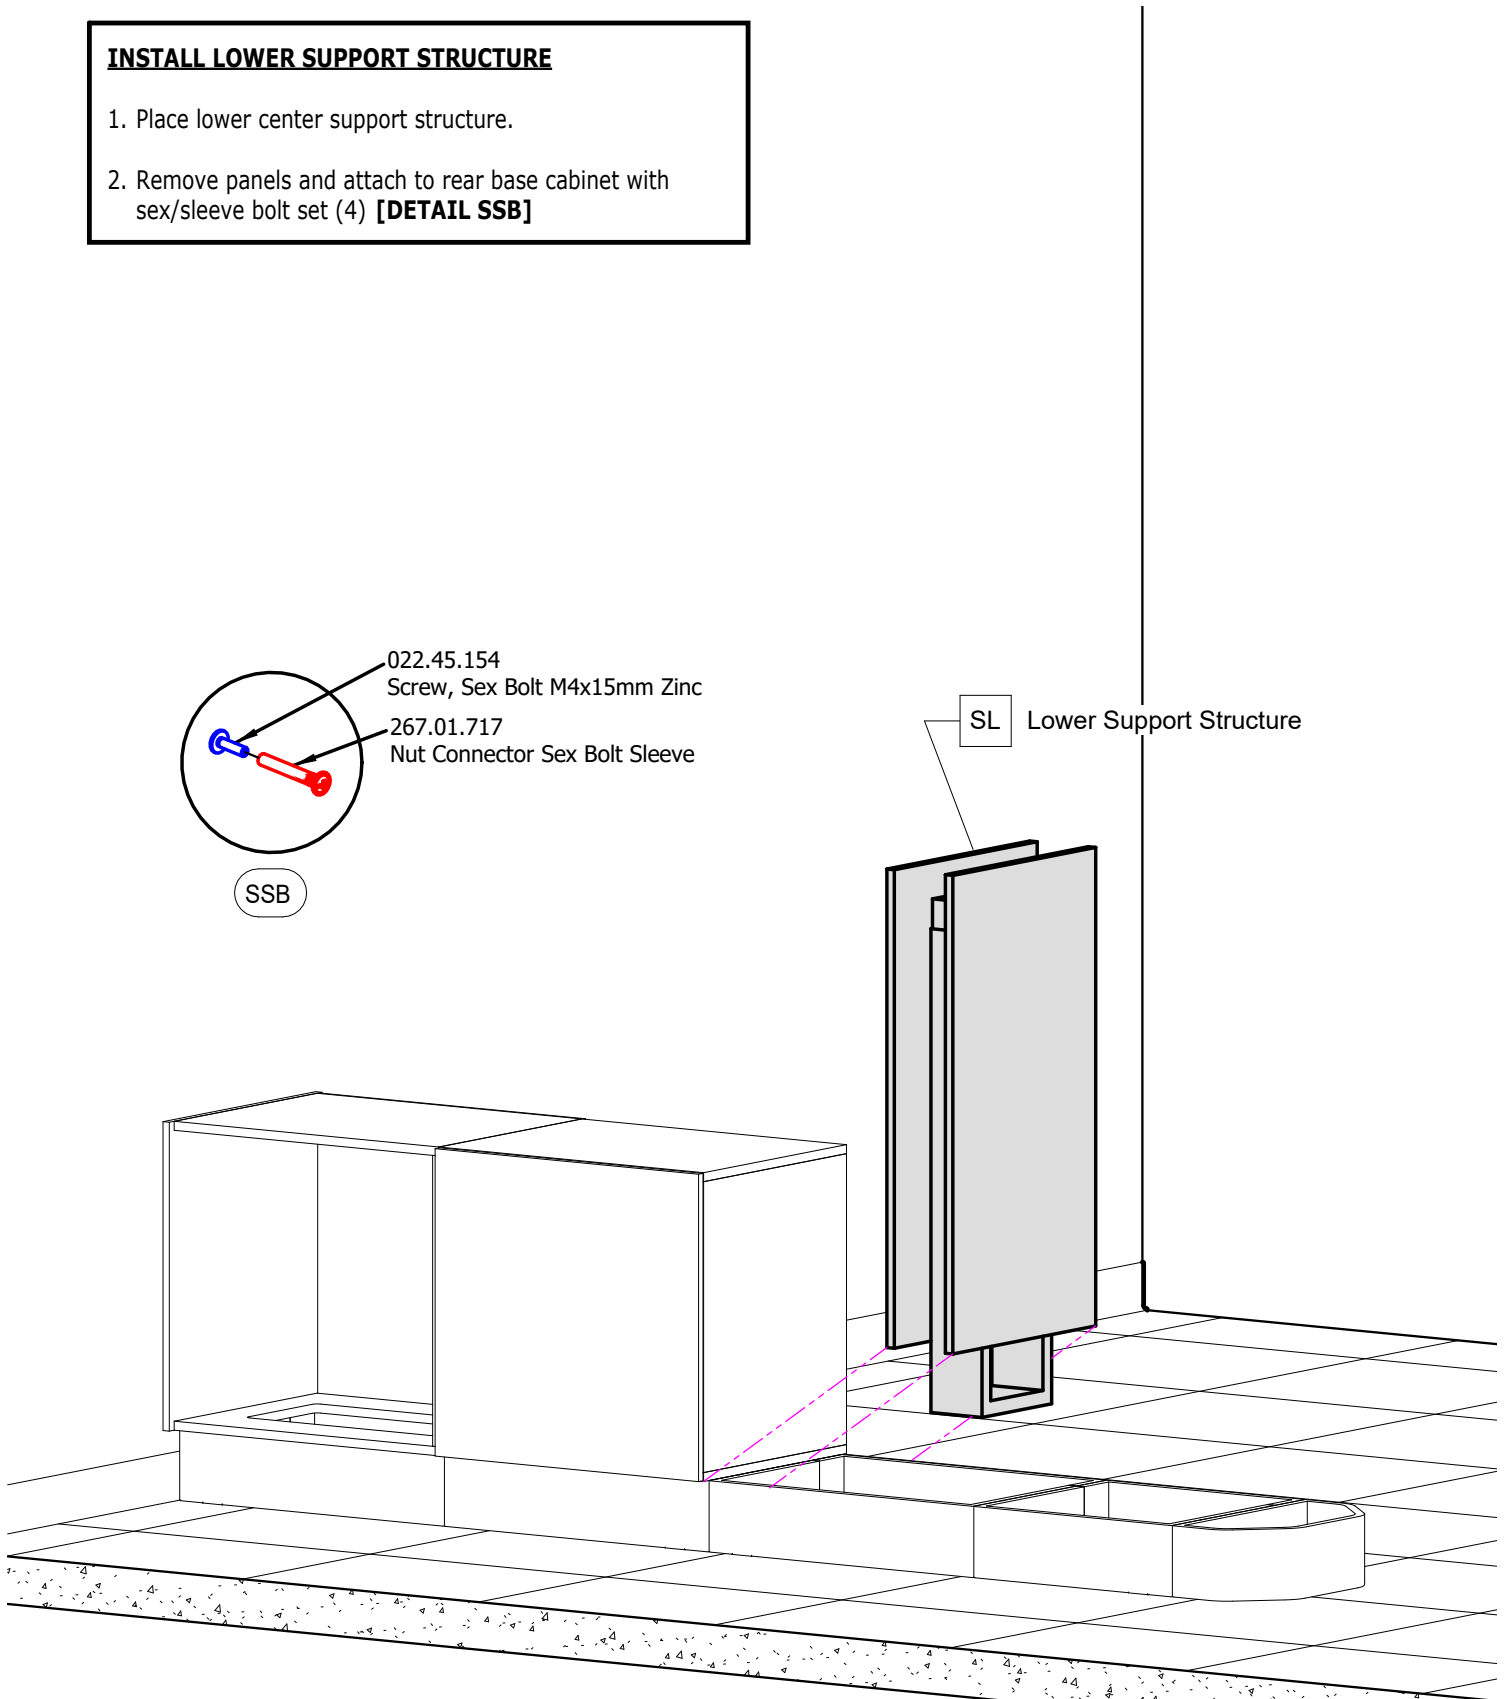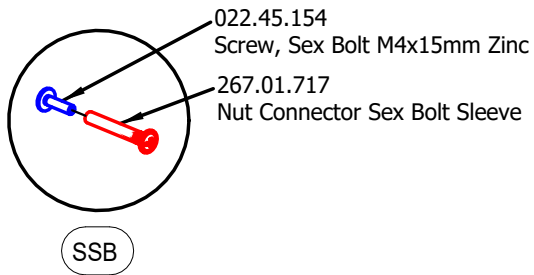

INSTALL BI-FOLD CABINET

1. Remove False bottom (4 screws).
2. Place on top or rear base cabinet.
3. Attach to center structural support with (6) Sex/sleeve bolts. **[DETAIL SSB]**
4. Use screws from false bottom and screw upper cab to base cab.

Remove support pieces after final mounting of cabinet to upper center support in next step.

False bottom


BC Bi-Fold Cabinet

022.45.154
Screw, Sex Bolt M4x15mm Zinc
267.01.717
Nut Connector Sex Bolt Sleeve

SSB



INSTALL UPPER SUPPORT STRUCTURE

1. Remove side panels and place upper center support structure onto lower center support structure.
2. Attach upper center support structure to Bifold Upper cabinet with (4) sex/sleeve bolts [DETAIL SSB]
3. Attach upper center support to lower centersupport w/ (8) self-tapping screws [DETAIL B]

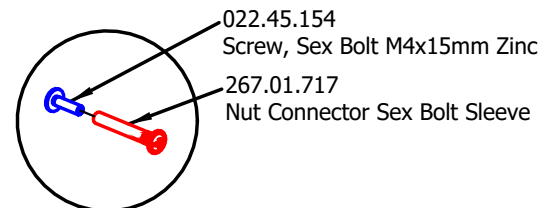

SSB

11544494-A
Screw, #10-16 x 5/8", HWH, Zinc

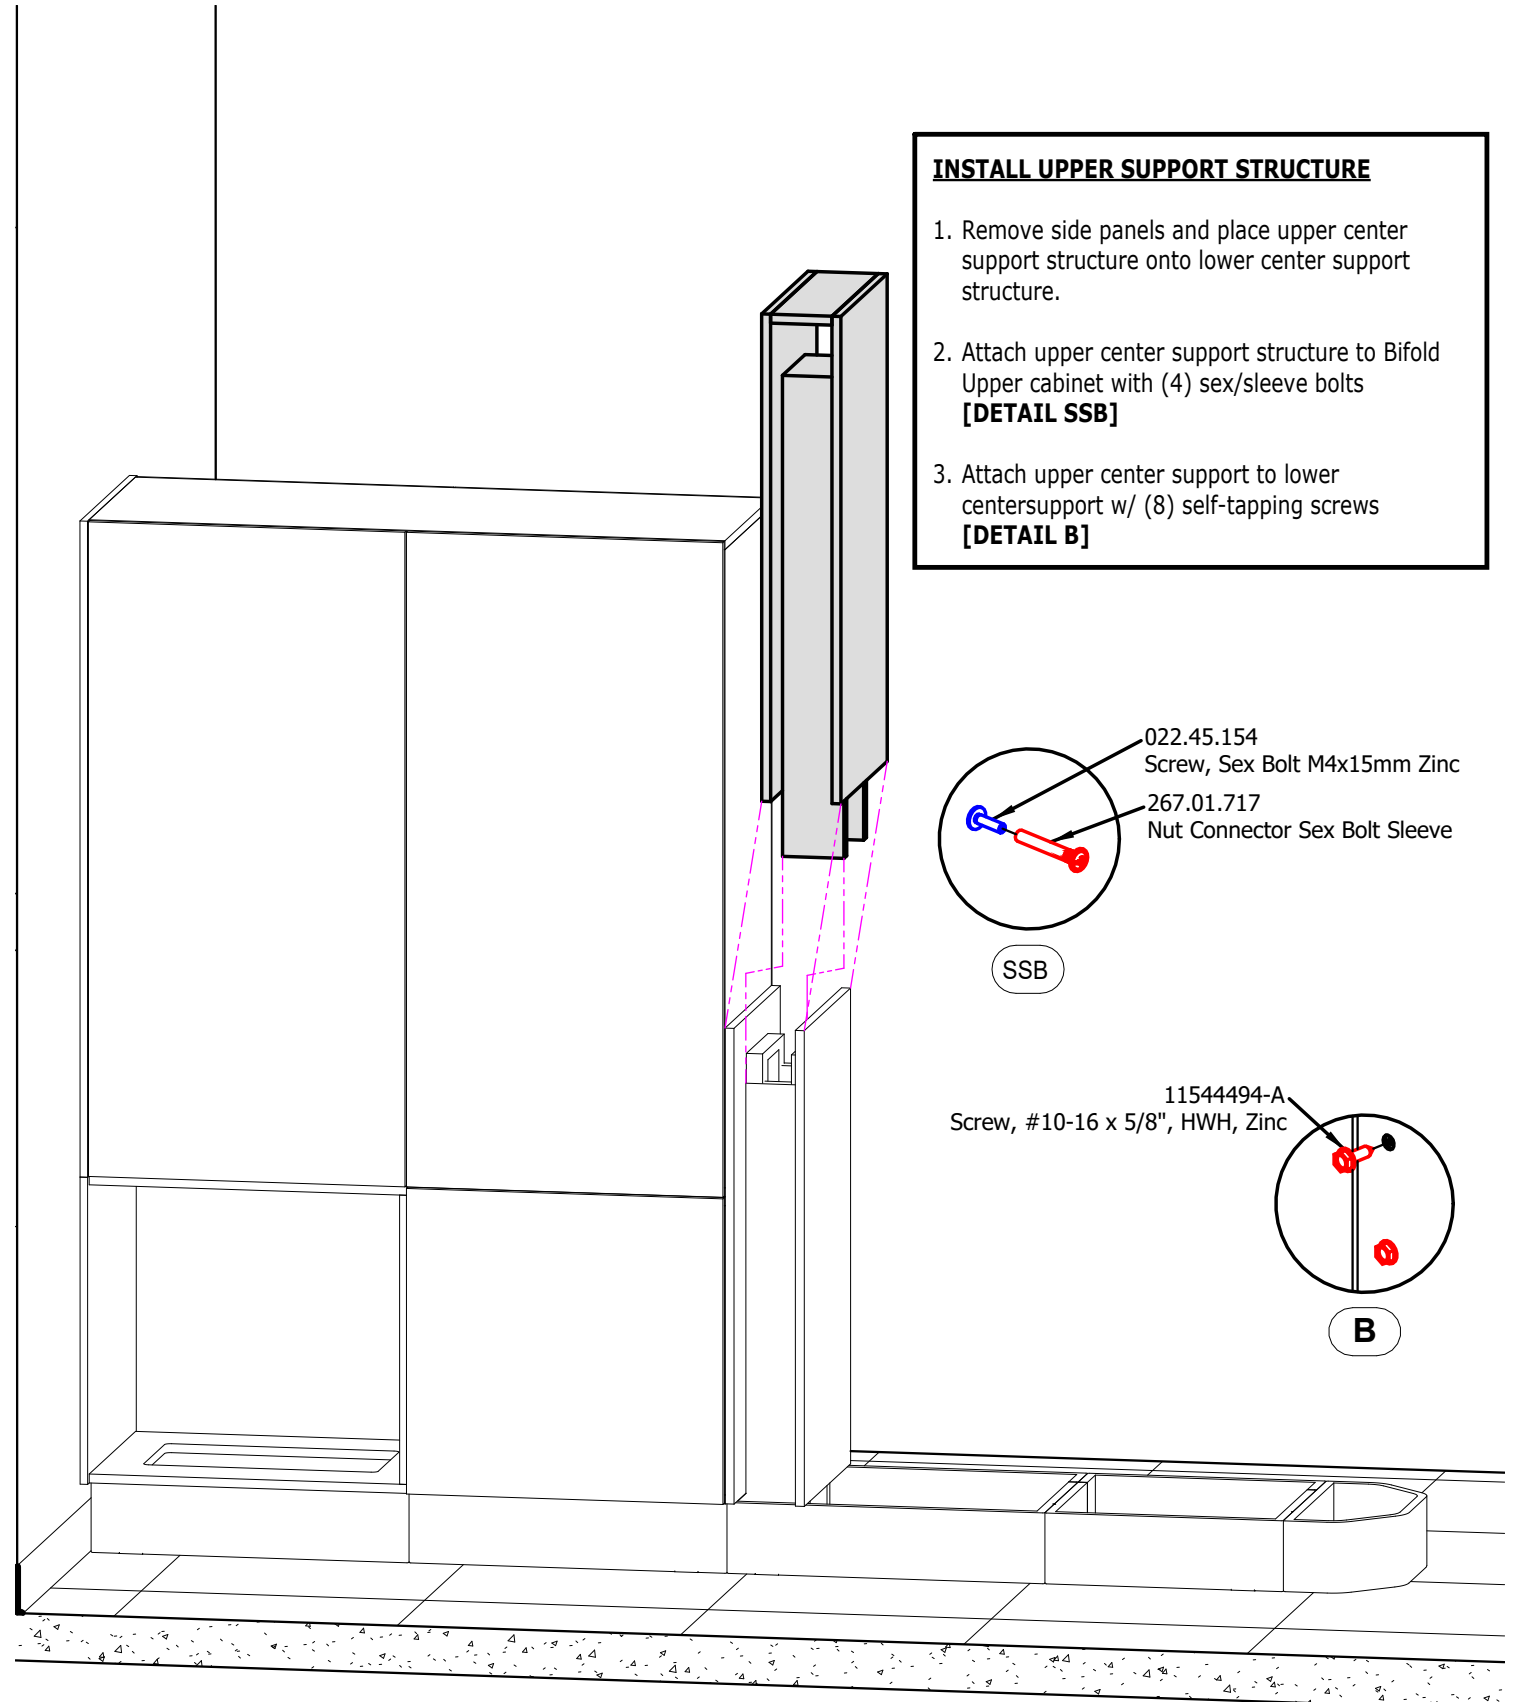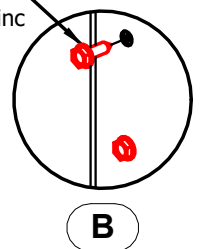



ALCTC 05A

Install - Front Sink Base

INSTALL FRONT SINK BASE CABINET

1. REMOVE ALL DOORS & DRAWERS.
DOORS/DRAWERS ARE MATCHING/COORDINATED SETS. KEEP TRACK OF WHERE EACH WAS REMOVED. DOORS & DRAWERS MUST BE REINSTALLED IN SAME CONFIGURATION AT END OF ASSEMBLY.
2. Remove false bottom
3. Place front sink base cabinet on toe kick as shown and attach with #10-24 X 1 1/2" self drilling screws. **[DETAIL CTK]**
4. Attach to center structural support with (4) sex/sleeve bolts. **[DETAIL SSB]**

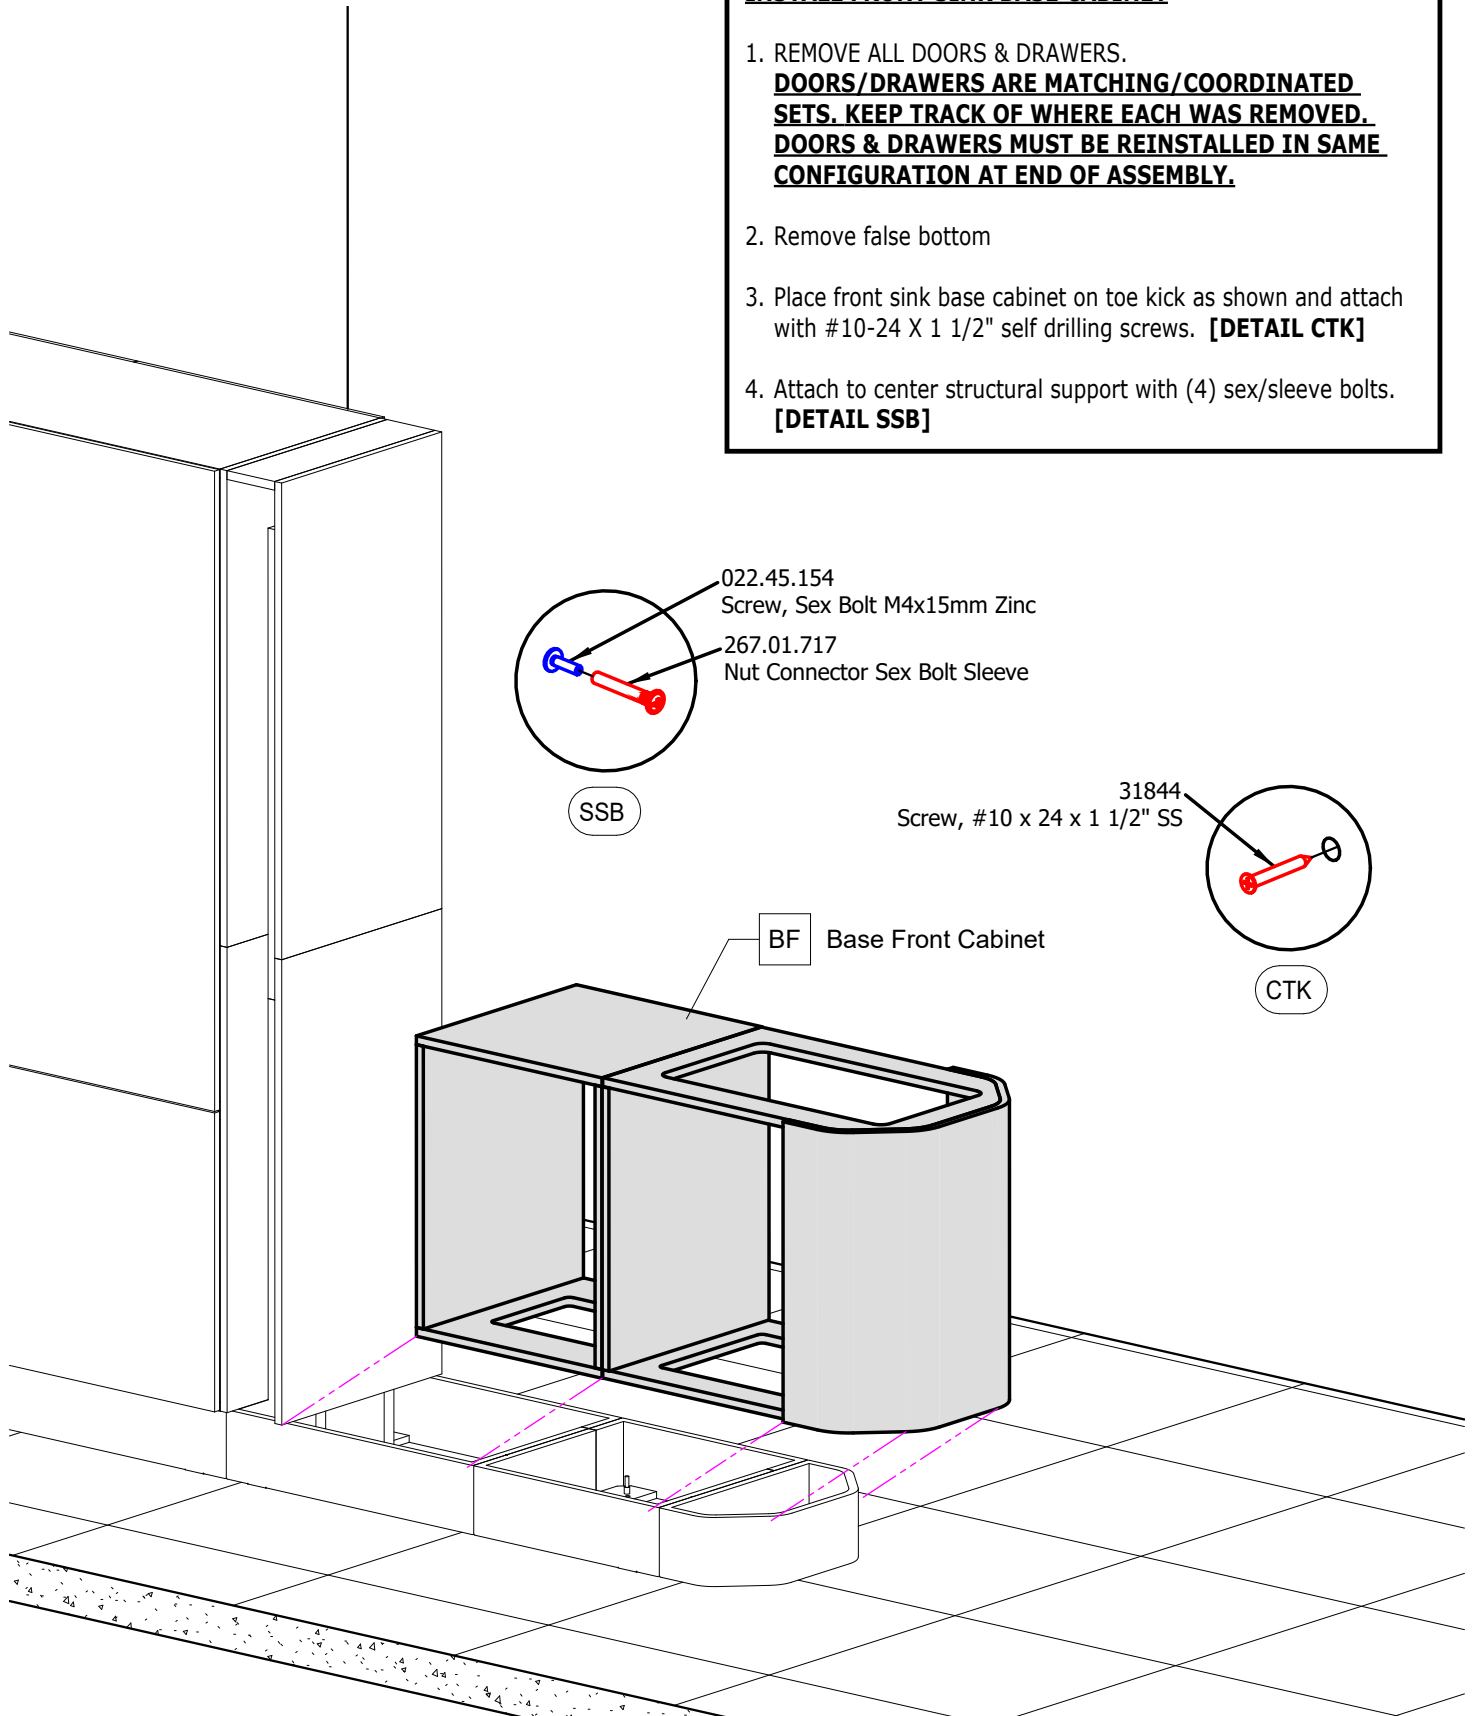


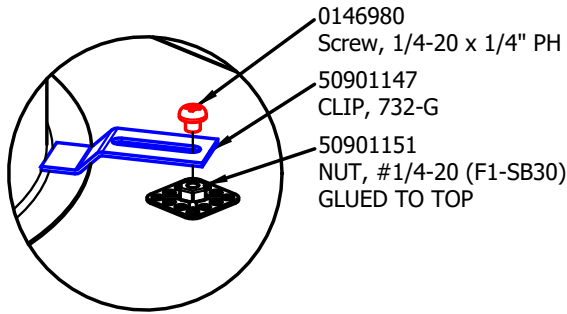

INSTALL COUNTERTOP TO SINK BASE CABINET


1. Install Sink, Faucet, Strainer, & Soap Dispenser.
Apply provided silicone to the sink prior to installing
2. Place Countertop on sink base cabinet.
Apply provided silicone to secure work surface to base cabinet

****NOTE: FINAL PLUMBING CONNECTIONS BY OTHERS****

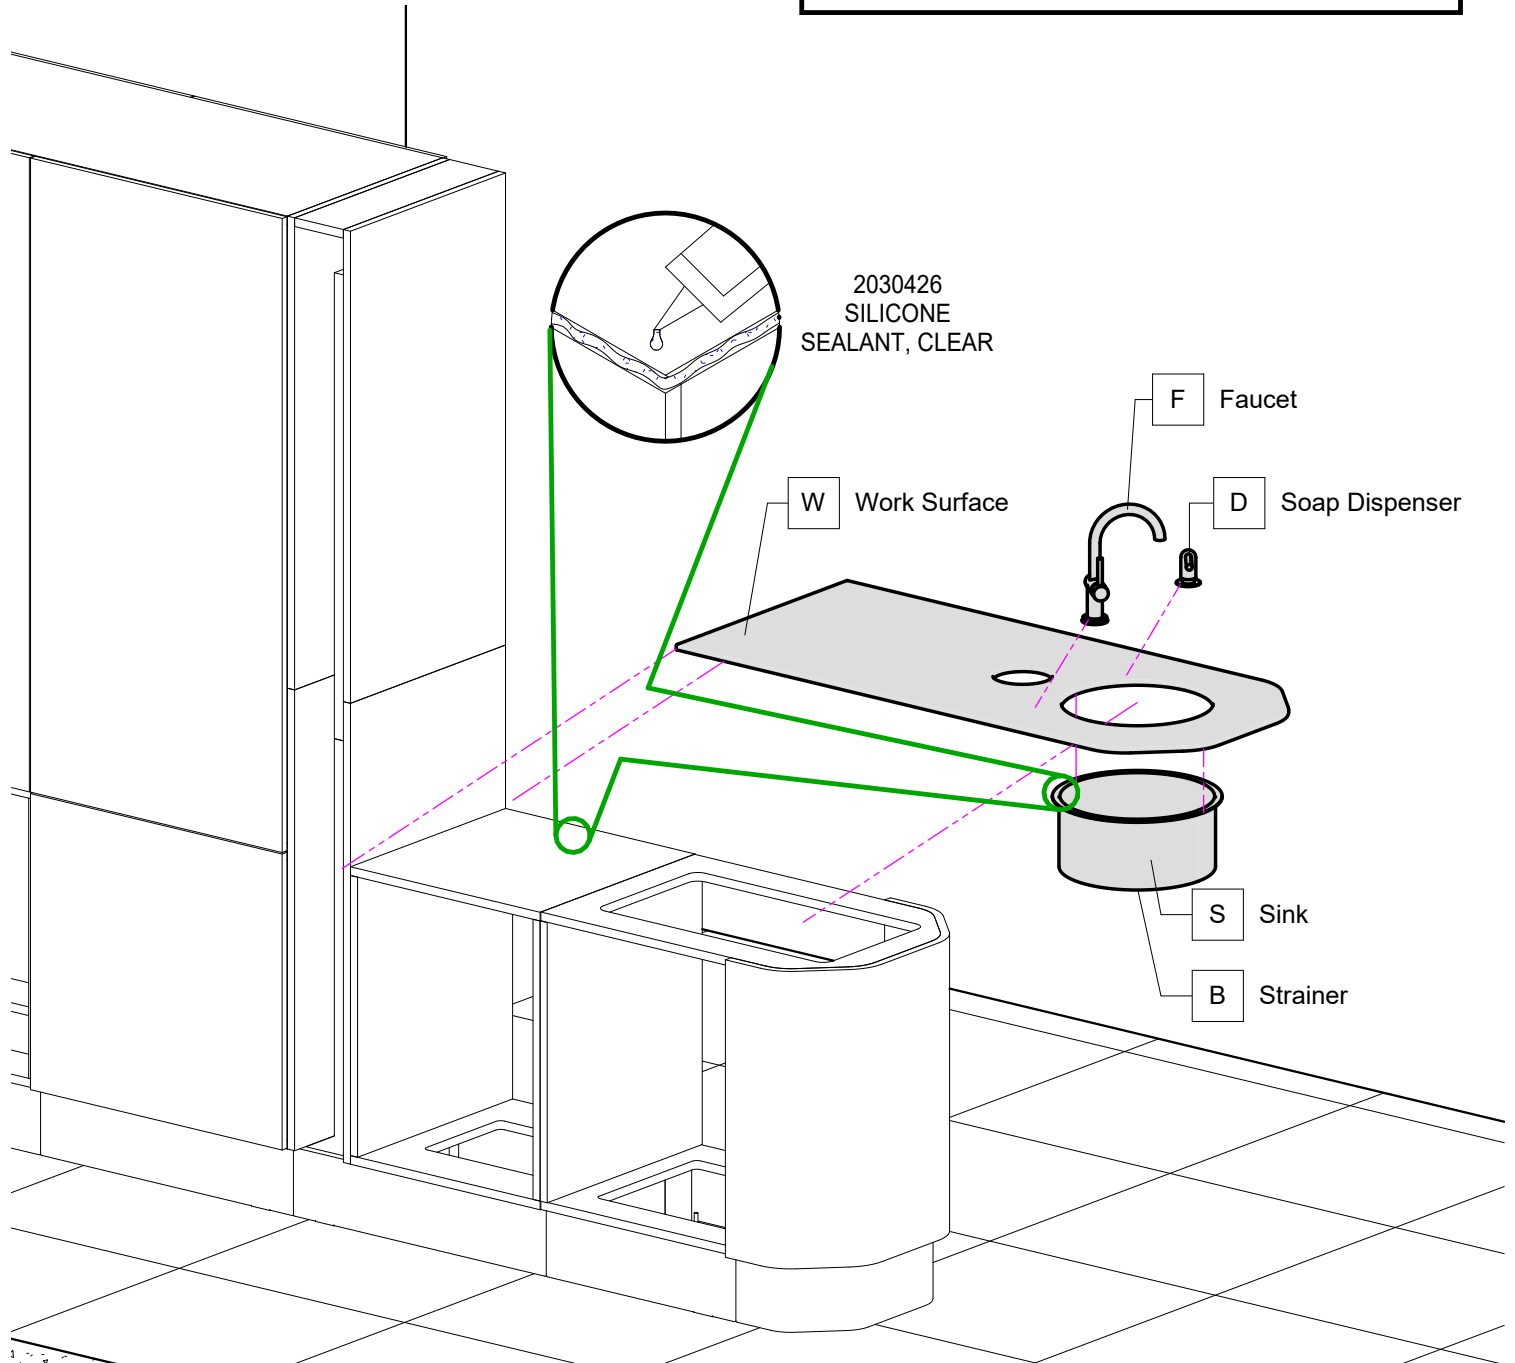


INSTALL UPPER MID CABINET

1. Place front upper mid cabinet on top of work surface
2. Attach to center structural support with (4) sex/sleeve bolts **[DETAIL SSB]**

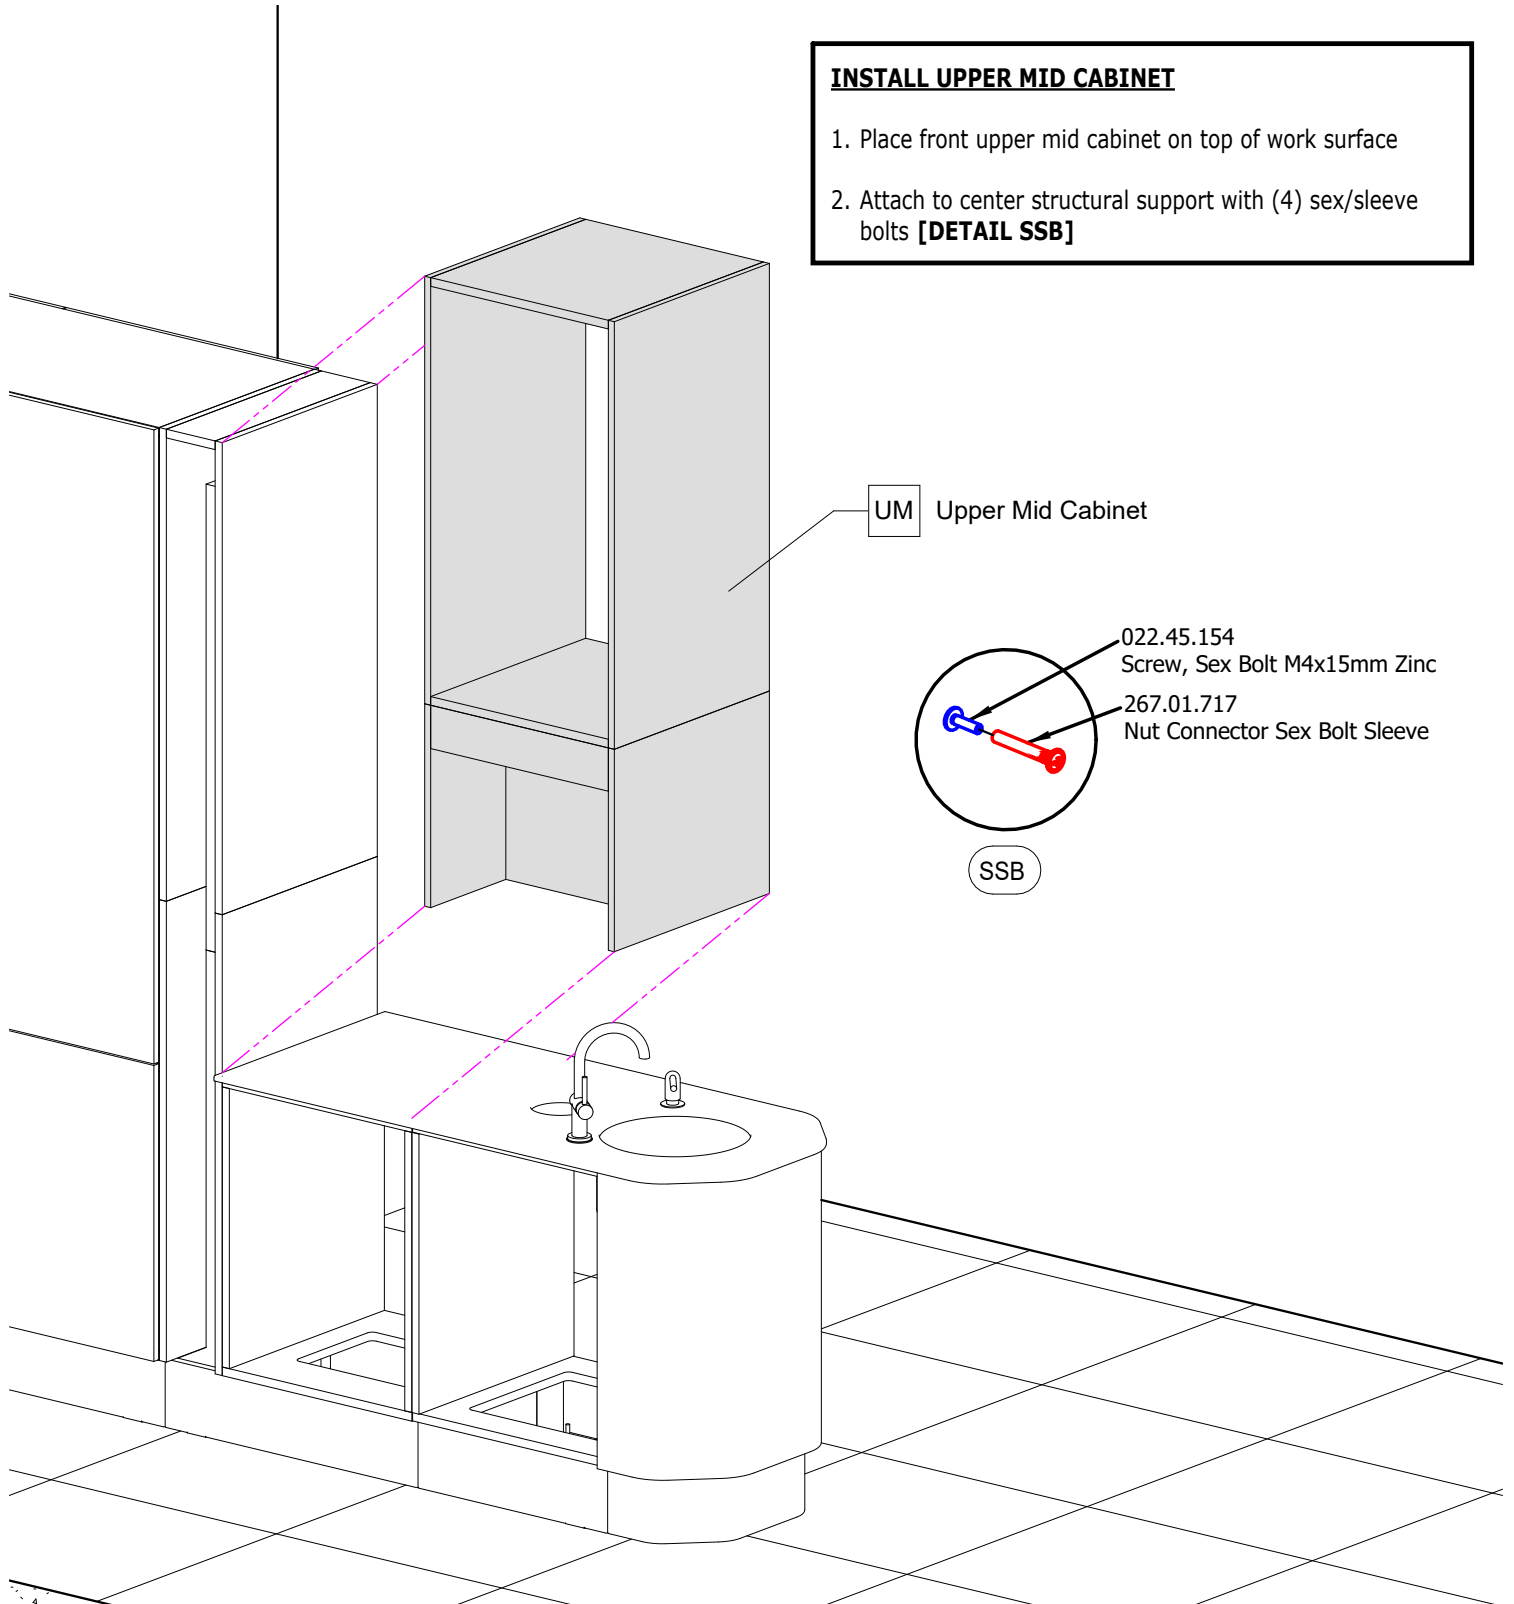

INSTALL UPPER FRONT CABINET

1. Place front upper front cabinet against upper mid cabinet.
2. Attach to center structural support with (4) sex/sleeve bolts. **[DETAIL SSB]**

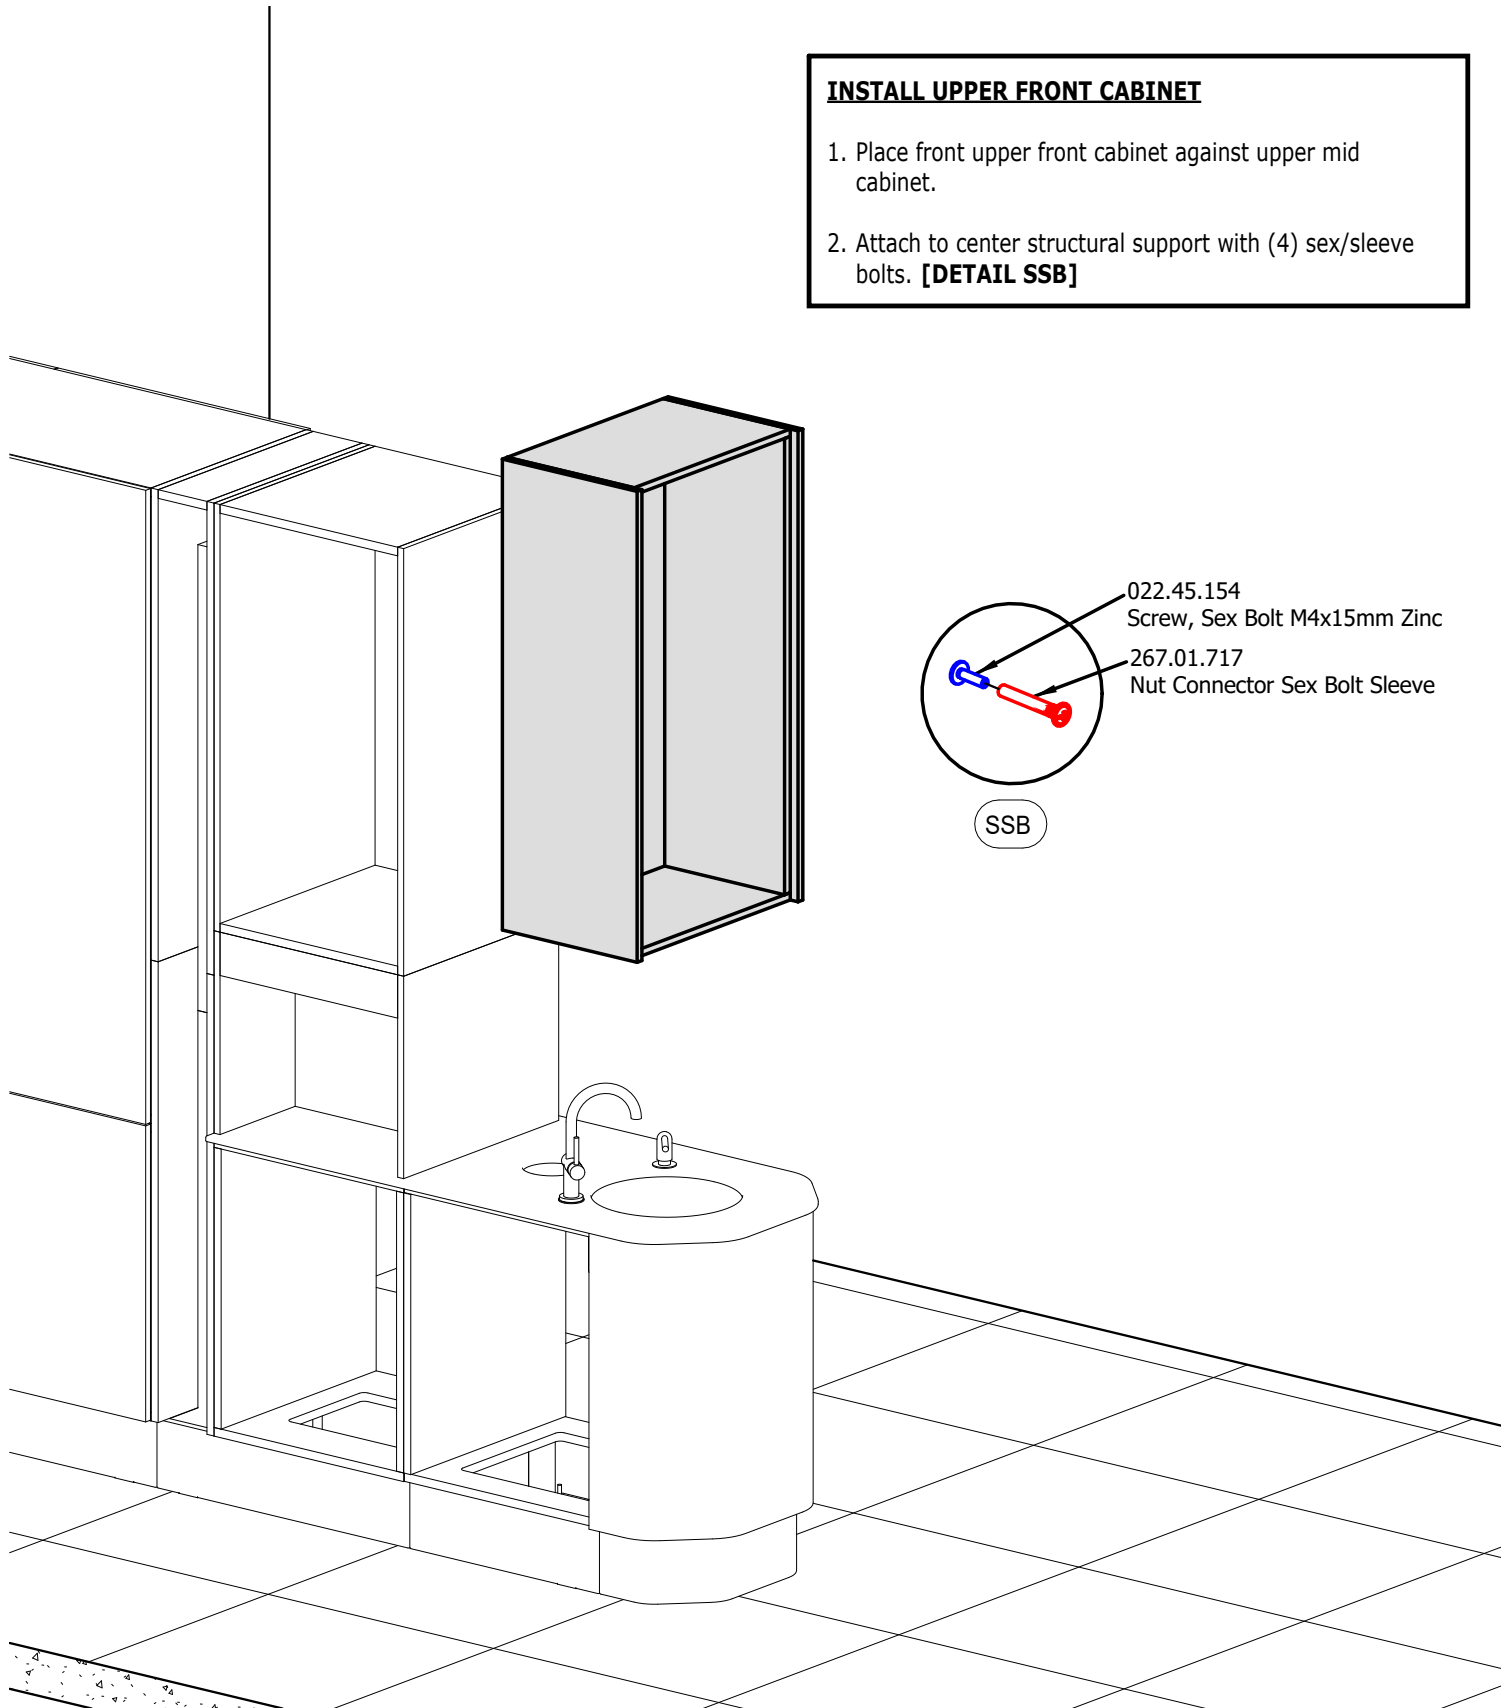

****NOTE: FINAL ELECTRICAL & PLUMBING CONNECTIONS BY OTHERS****

1. REINSTALL DOORS/DRAWERS IN ORIGINAL POSITIONS FROM WHERE THEY WERE REMOVED.
2. Attach Door/Drawer Pulls and remaining components as needed.
3. ADJUST TOE-KICK LEVELERS AND TIGHTEN ANCHOR NUTS.
4. CHECK FOR ALIGNMENT OF DOORS & DRAWERS, FINAL ADJUSTMENTS MAY BE NECESSARY.

