




Cover Page	I
Unpacking	I-0
Utilities Location	I-1
Utility Access	I-2
Toe Kicks	I-3
Achorbolt Layout Full Scale	I-3t
Front Sink Base	I-4
Countertop & Hardware	I-5
Upper Front Cabinet	I-6
Final Assembly	I-7

ALCTC B5C-000-000

Install - Unpacking

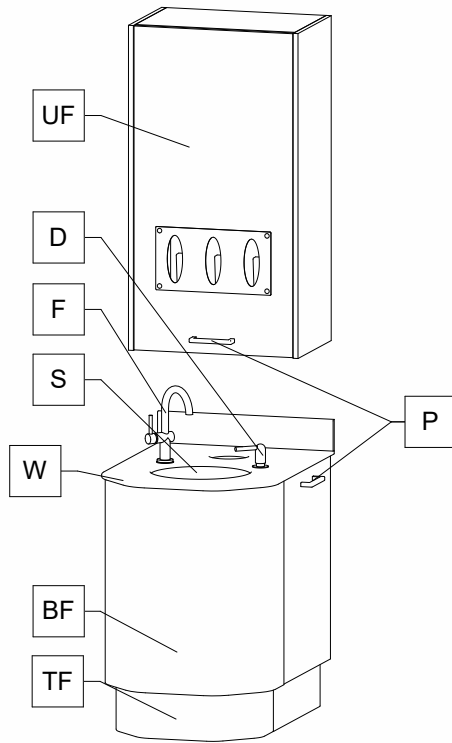



Packing List

Mark	Description	Qty
Cabinetry		
BF	Base Front Cabinet	1
TF	Front Toe Kick	1
UF	Upper Cabinet	1
W	Work Surface	1
Hardware		
	#10-24 X 1 1/2" Self Drilling Screw	8
	#12 3" Wood Screws	8
F	Faucet	1
P	Door/Drawer Pull	3
TA	Wedge Anchor Bolts	4
Other		
A	Tube of Caulk	1
B	Strainer	1
D	Soap Dispenser	1
S	Sink	1

Skid A contains: Base Cabinets, Toe Kick Package Assemblies, Solid Surface Top Package


1. Remove all packing material.
2. REMOVE HARDWARE PACK FROM SINK BASE ON **SKID A**.

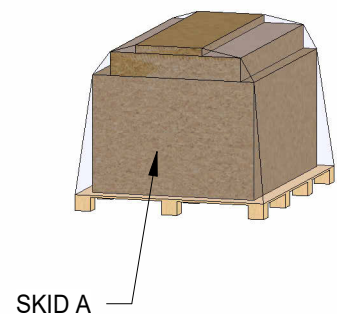

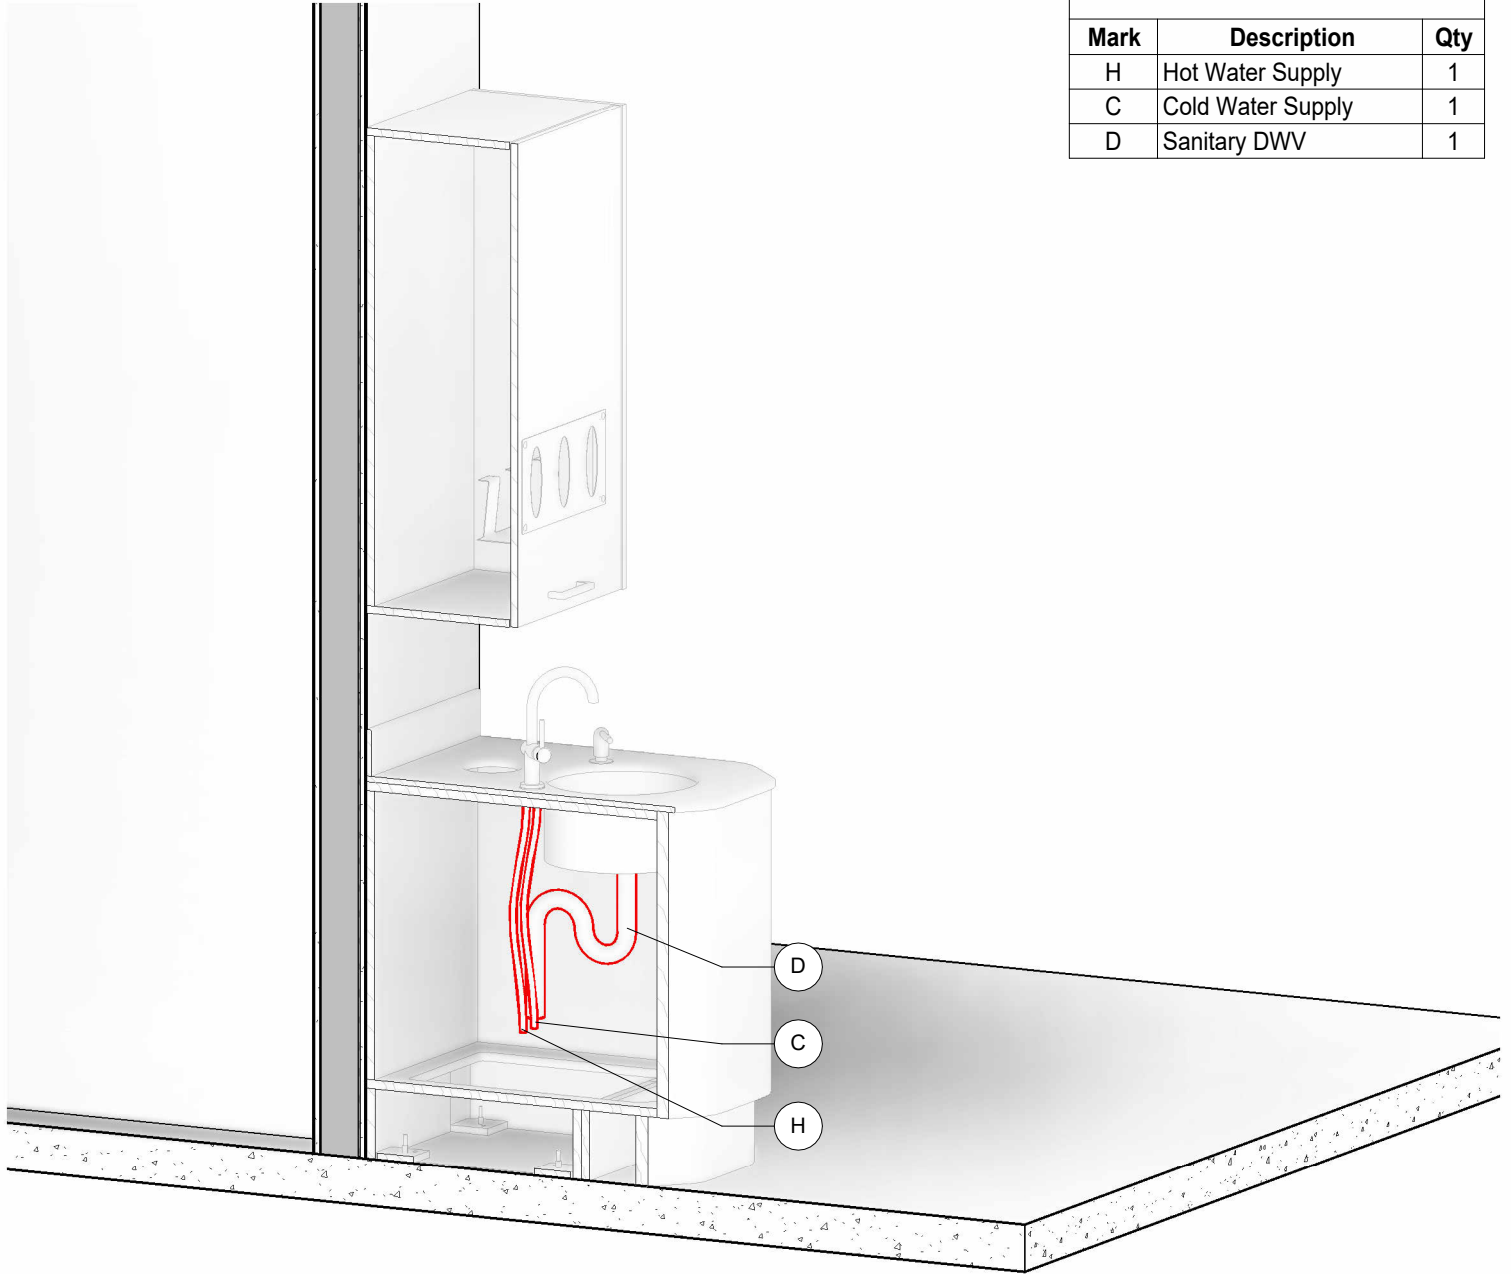

Plumbing Utilities -by others-

Mark	Description	Qty
H	Hot Water Supply	1
C	Cold Water Supply	1
D	Sanitary DWV	1

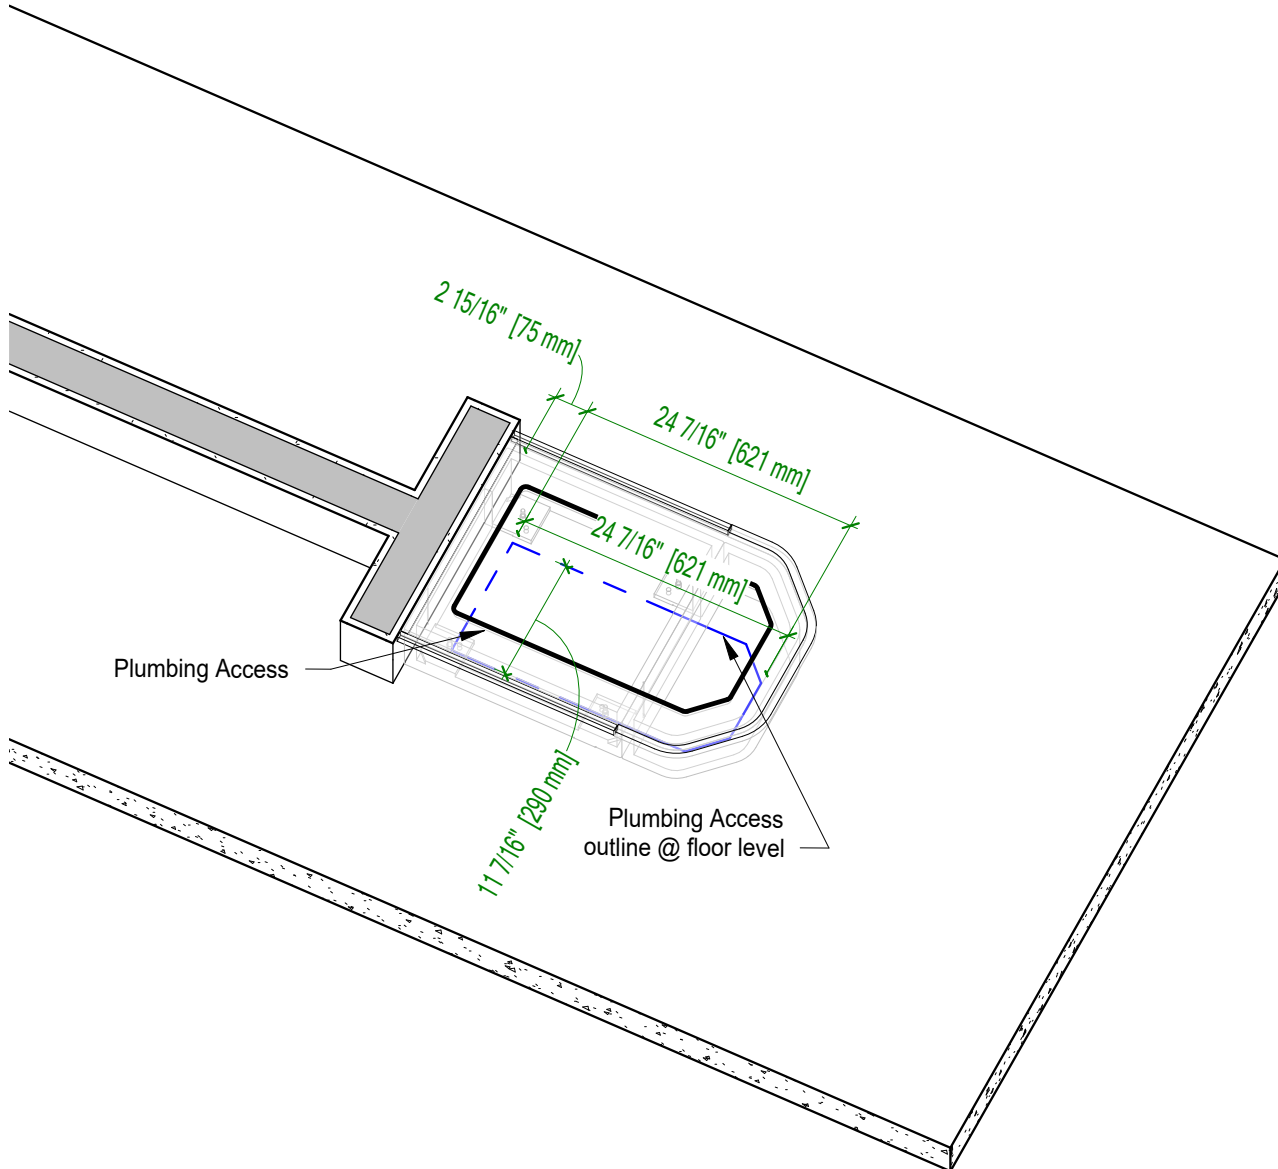

INSTALL TOE KICK ASSEMBLIES


1. Using Template **Drawing I-3t**, Drill anchor bolt holes (3/8" dia x 2" min) into floor as the designated locations (shown in BLUE).

Note: Toe kick leveling glides can be adjusted (top-down access) with flat head or 7/32 socket. ALL LEVELING GLIDES ARE PRE-INSTALLED ON TOE KICKS

2. Place anchors through toe kick into drilled holes for all toe kick sections. **[Detail A]**

Note: Do not secure anchors to allow movement until final assembly/leveling is completed

TF Front Toe Kick

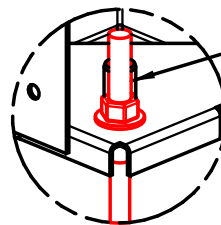

50901314
BOLT, WEDGE ANCHOR 3/8" X 5-1/2"

A


ALCTC B5C-000-000

Install - Front Sink Base


INSTALL FRONT SINK BASE CABINET

1. REMOVE ALL DOORS & DRAWERS.
DOORS/DRAWERS ARE MATCHING/COORDINATED SETS. KEEP TRACK OF WHERE EACH WAS REMOVED. DOORS & DRAWERS MUST BE REINSTALLED IN SAME CONFIGURATION AT END OF ASSEMBLY.
2. Place front sink base cabinet on toe kick as shown and attach with #10-24 X 1 1/2" self drilling screws. [DETAIL CTK]
3. Attach to wall with (4) wood screws. [DETAIL CWS]

#12 3" Wood Screws

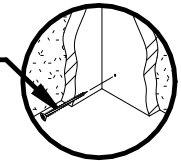


CWS

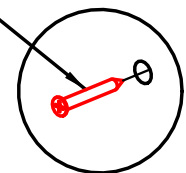31844
Screw, #10 x 24 x 1 1/2" SS


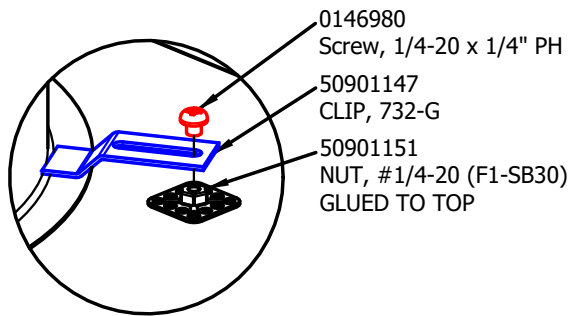
CTK

BF Base Front Cabinet

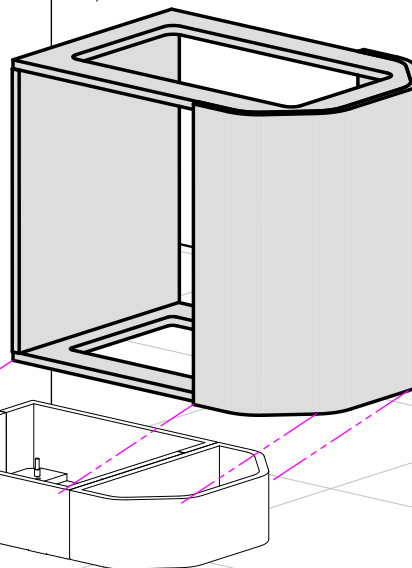

ALCTC B5C-000-000


Install - Countertop & Hardware



INSTALL COUNTERTOP TO SINK BASE CABINET


1. Install Sink, Faucet, Strainer, & Soap Dispenser.
Apply provided silicone to the sink prior to installing
2. Place Countertop on sink base cabinet.
Apply provided silicone to secure work surface to base cabinet

****NOTE: FINAL PLUMBING CONNECTIONS BY OTHERS****

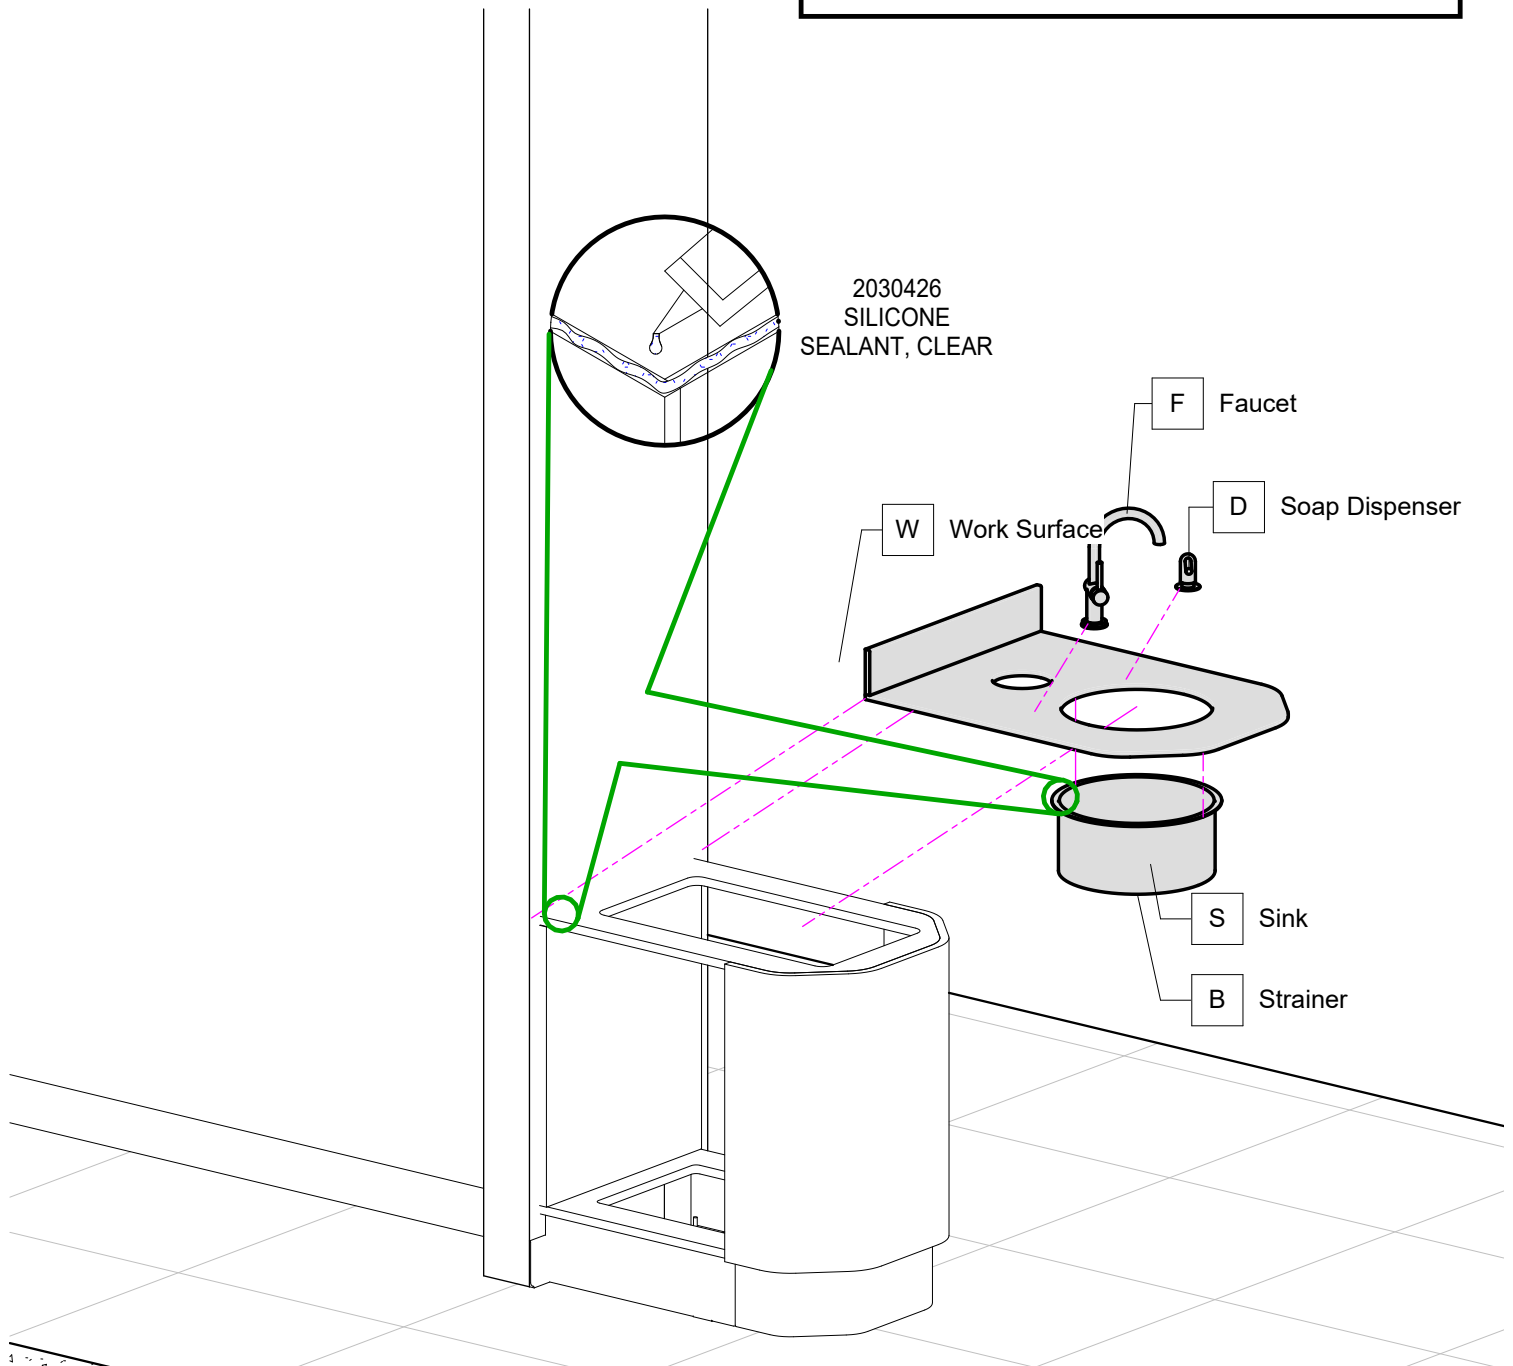


INSTALL UPPER FRONT CABINET


1. Place front upper front cabinet against wall.
2. Attach to wall with (4) wood screws. **[DETAIL CWS]**

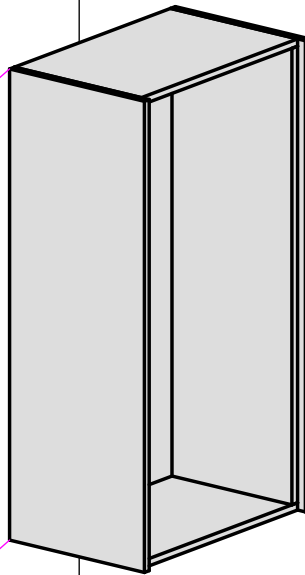

#12 3" Wood Screws

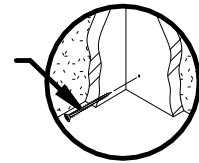

CWS

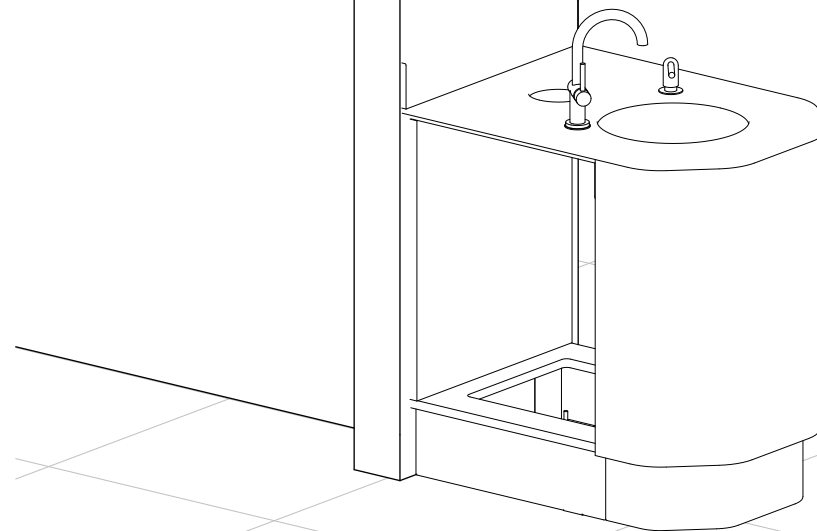

ALCTC B5C-000-000

Install - Final Assembly

****NOTE: FINAL ELECTRICAL & PLUMBING CONNECTIONS BY OTHERS****

1. REINSTALL DOORS/DRAWERS IN ORIGINAL POSITIONS FROM WHERE THEY WERE REMOVED.
2. Attach Door/Drawer Pulls and remaining components as needed.
3. ADJUST TOE-KICK LEVELERS AND TIGHTEN ANCHOR NUTS.
4. CHECK FOR ALIGNMENT OF DOORS & DRAWERS, FINAL ADJUSTMENTS MAY BE NECESSARY.

